

STC 11U Chassis Shipping Guidelines

Spirent TestCenter 11U Chassis (SPT-1100A) Packaging Guidelines

Please follow these packaging instructions for all shipping and unit returns. Spirent will not be responsible for improper handling including shipment damage to the chassis.

I - General Instructions:

- If the original packaging can't be used or missing, please contact Spirent at the nearest Spirent location listed on the last page and request replacement packing materials.

II - Spirent TestCenter SPT-1100A Chassis Packing Instructions:

- Remove all cards/modules from the chassis (See Fig. 1).
- For loaner chassis, please install the blanks panels and tighten all panel fasteners (see Fig. 2).



Fig. 1

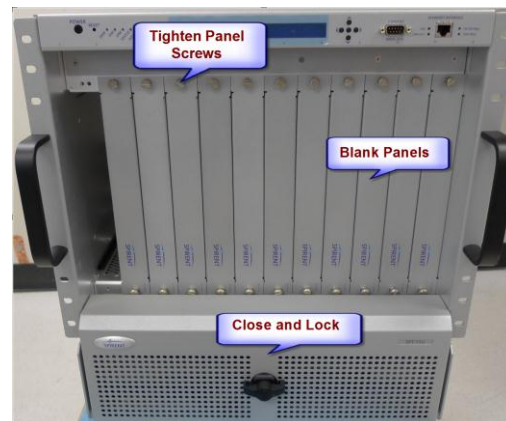


Fig. 2

- Do not remove Chassis Controller. Tape power cord retention clips (See Fig. 3)
- **Always** use a pallet when shipping the SPT-1100A Chassis. (See Fig 4)



Fig. 3

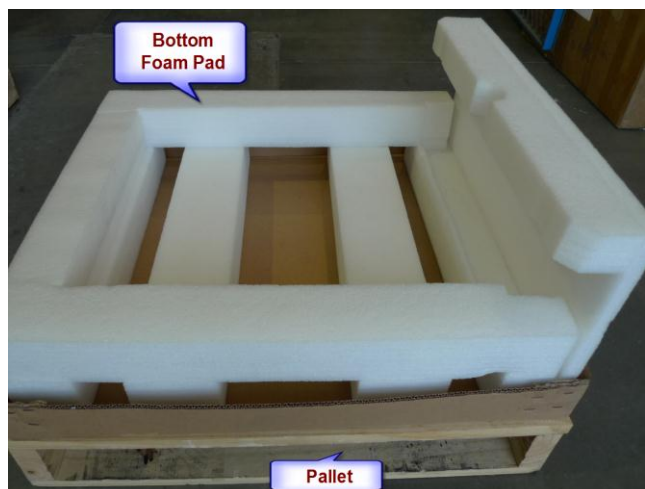


Fig. 4

STC 11U Chassis Shipping Guidelines

- Place the bottom foam pad in the carton tray/pallet (See Fig. 4).
- Place the chassis inside the anti-static bag (See Fig. 5).
- Gently lower the chassis into the bottom foam pad – two persons required (See Fig 5 & 6).



Fig. 5



Fig. 6

- Place 2 side card boards together (See Fig. 7 & 8).
- Put the top foam pad on the top of the chassis (See Fig. 8).
- For Loan Chassis, please include the accessories box on top of the chassis.



Fig. 7



Fig. 8

STC 11U Chassis Shipping Guidelines

- Place the carton tray on top and secure with 2 ratchet straps (See Fig. 9 & 10).



Fig. 9



Fig. 10

- Please secure the ratchet arms with the cable ties provided in order to prevent any tampering while in transit (See Fig. 11 & 12).

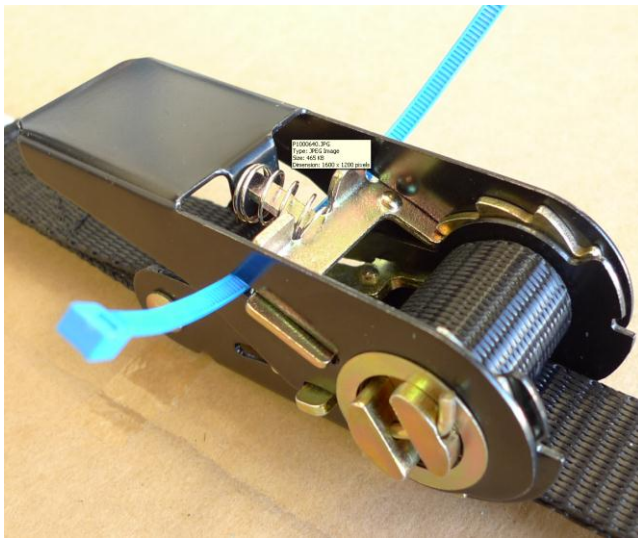


Fig. 11

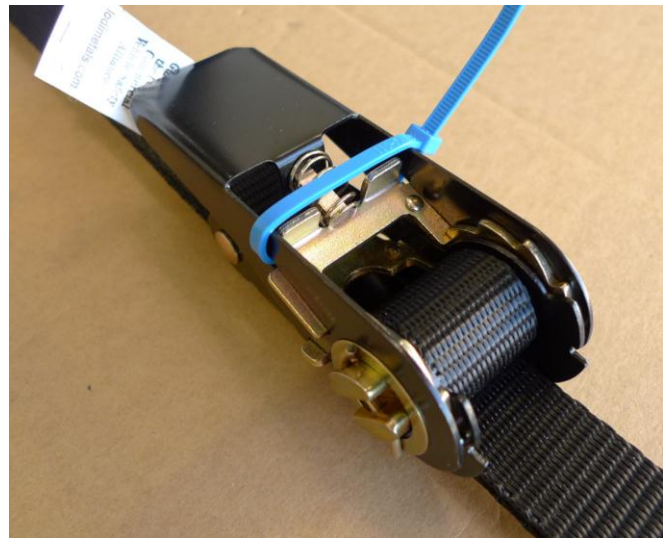


Fig. 12

STC 11U Chassis Shipping Guidelines

Details how to tighten the strap:

- Once the strap has been routed through the pallet and around the box, insert the strap end into the ratchet slot (See Fig. 13).
- Place the ratchet strap on the box and gently pull the strap end to get rid of any slack (Fig. 14).



Fig. 13



Fig. 14

- Move the ratchet arm back and forth in order to tighten the strap around the package until the desired tightness is reached (See Fig. 15).

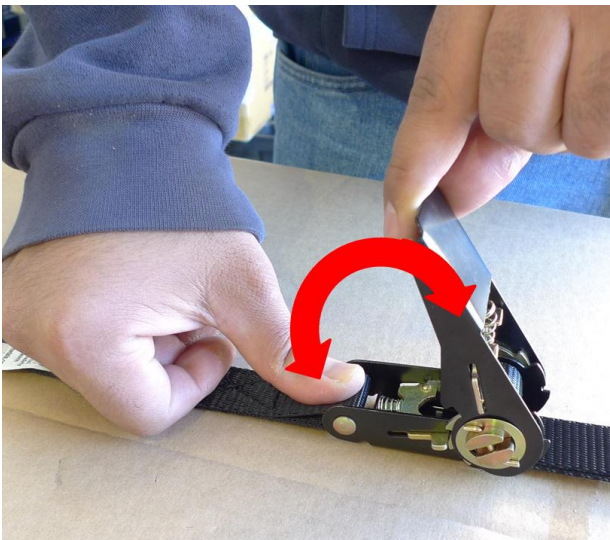


Fig. 15

STC 11U Chassis Shipping Guidelines

Details how to loosen the strap:

- Pull and hold the lock mechanism and rotate the ratchet arm to horizontal (flat) position to loosen the strap (See Fig. 16 and 17).



Fig. 16



Fig. 17

STC 11U Chassis Shipping Guidelines

III - Spirent TestCenter SPT-1100A Chassis Packing & Pallet Policies and Guidelines

- All STC 11U chassis must be shipped with a pallet.
- Best Practices for pallet shipping are described in the guideline notes in the preceding pages.
- Shipping the STC 11U chassis without pallet attached may result in damage to unit.
- Shipping the 11U Chassis without pallet may void support coverage.



IV - Spirent TestCenter SPT-1100A Packing Materials & Reordering Information

- If any of the following packing materials are missing, please order through Spirent Support listed below:
 - Pallet - PN: 07-000225
 - Anti-Static Bag - PN: 07-001208
 - Ratchet Strap - PN: 07-001223
 - Carton Set - PN: 07-001239
 - Foam Set - PN: 07-001241
 - Cable Tie - PN: 03-001542

Americas E-mail: support@spirent.com Web: http://support.spirent.com Toll Free: +1 800-SPIRENT (+1 800-774-7368) (US and Canada) Phone: +1 818-676-2616 Fax: +1 818-880-9154 Hours: Monday through Friday, 05:30 to 18:00, Pacific Time	Europe, Africa, Middle East E-mail: support@spirent.com Web: http://support.spirent.com Phone: +33 (0) 1 61 37 22 70 Fax: +33 (0) 1 61 37 22 51 Hours: Monday through Thursday, 09:00 to 18:00, Friday, 09:00 to 17:00, Paris Time	Asia Pacific E-mail: support@spirent.com Web: http://support.spirent.com Phone: 400 810 9529 (mainland China) Phone: +86 400 810 9529 (outside China) Fax: +86 10 8233 0022 Hours: Monday through Friday, 09:00 to 18:00, Beijing Time
---	--	--